



- 1 動作信號出線孔
- 2 左右旋轉3/8"入油口
- 3 下降動作3/8"入油口
- 4 上升動作3/8"入油口
- 5 交換點確認信號開關